


Copper Tube Extension

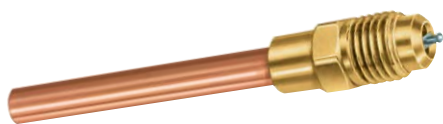

Single Step

For use with sil-phos alloy and copper fittings
Includes cap (NFT5-4) and valve core, 1/4" ID
Generous counter bore allows removal of core if flare becomes damaged
All tees and crosses are tapped to receive an access core in all 1/4" SAE flare ends
All pipe connections have internal braze cups for dip tube applications
Note: OD x ID sizes are for copper tube extension



A31004

PART NO.	QTY.	DESCRIPTION
A31002	5	1/8" OD
A31003	5	3/16" OD x 1/8" ID
A31004	5	1/4" OD x 3/16" ID
A31005	5	5/16" OD x 1/4" ID
A31006	5	3/8" OD x 5/16" ID
A31008	3	1/2" OD
A31004S	5	1/4" OD

Copper Tube Extension



Multi-Step

For use with sil-phos alloy and copper fittings
Includes cap (NFT5-4) and valve core, 1/4" ID
Generous counter bore allows removal of core if flare becomes damaged
All tees and crosses are tapped to receive an access core in all 1/4" SAE flare ends
All pipe connections have internal braze cups for dip tube applications
Note: OD x ID sizes are for copper tube extension




A31009

PART NO.	QTY.	DESCRIPTION
A31009	3	1/8" OD ext; 3/16", 1/4" and 5/16" ODF body steps
A31011	3	3/16" OD ext; 1/4" and 3/8" ODF body step
A31012	3	1/8" OD ext.; 1/8" and 3/16" body step

Copper Braze



Tapper Only

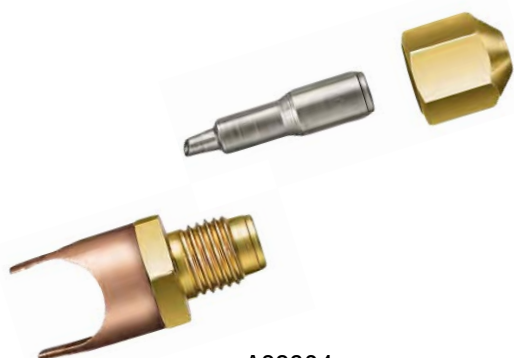

A32804

PART NO.	QTY.	DESCRIPTION
A32804	5	1/4"
A32805	5	5/16"
A32806	5	3/8"
A32808	3	1/2"
A32810	3	5/8"
A32812	2	3/4"
A32814	2	7/8"
A32818	2	1-1/8"

Copper Braze



Saddle with Tapper



A32904

PART NO.	QTY.	DESCRIPTION
A32904	5	1/4"
A32905	5	5/16"
A32906	5	3/8"
A32908	3	1/2"
A32910	3	5/8"
A32912	2	3/4"
A32914	2	7/8"